

USER MANUAL

15.6" All in One AD Display

Version 08.1

Before connecting, operating or adjusting this product, please read these instructions completely. Please keep this manual of future reference.

Product and brand names mentioned in this manual are trademarks of registered trademarks of their respective holders.

Specification is subject to change without notice.

Important Information



Please do not open or remove the cover plate because it may generate a high voltage shocking or other dangers.



Please do not precede the maintenance or repairing of this unit by yourself. Carefully read the instruction manual before use, and keep the manual for future reference.

Please read and comply with all warnings, cautions, and the manual thoroughly. You might lose your warranty if you modify or revise this item in such a manner not approved by this manual.

- AC cords enclosed in this product are for 110V or 220V.
- If any liquid or solid objects fall inside the cabinet, unplug the set immediately and have it checked by qualified service personnel before operating it again.
- Never add any attachments and/or equipments without approval of the manufacturer. Such additions can increase the risk of fire, electric shock, or other personal injury.

Important Warnings and Safety Precautions

- Read instructions- all the safety and operating instructions should be read before the product is operated.
- Keep the safety and operating instructions for future reference.
- Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in fire or electric shock. Never spill liquid of any kind on the product.
- Do not remove/insert the plug into the socket with wet hands in order to prevent electric shock.
- Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Do not attempt to service this product by yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all services to qualified service personnel. The manufacturer will not be responsible for any injuries or damage caused to the product.
- AC cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, pay attention particularly to cords at plugs, convenience receptacles, and the points where they exit from the product.
- Unplug the unit from the wall outlet before cleaning. Use a damp cloth; do not use liquid or aerosol cleaners. Please refer to the cleaning instruction.
- Do not place the product on an unstable cart, stand, tripod, bracket, or table where it may fall. A falling unit can cause serious injury to a child or adult and serious damage to the appliance. Follow the manufacturer's instructions when mounting the unit, and use a mounting accessory recommended by the manufacturer.
- The unit is designed with slots in the cabinet for ventilation to protect it from overheating. Do not block these openings with any object, and do not place this unit on a bed, sofa, rug, or other similar surfaces. Do not place it near a radiator or heat register.
- The plug provided by this unit will fit into the power outlet in only one way. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still does not fit, contact your electrician to replace your outlet.
- Use wall or ceiling mounts when mounting the product on a wall or ceiling, be sure to install the product according to the method recommended by the manufacturer.
- For safety reasons, do not leave children along with the unit. **DO NOT ALLOW CHILDREN TO CLIMB ON THE UNIT.**

Contents

| | | |
|----|---|----|
| 1. | INTRODUCTION..... | 1 |
| | Product Description | 1 |
| | Product Features | 1 |
| | Package Contents | 2 |
| | Assembly and Connection..... | 2 |
| 2. | SYSTEM SETUP | 3 |
| | Remote Control function | 3 |
| 3. | ON SCREEN DISPLAY OPERATING INSTRUCTIONS..... | 4 |
| | --- Screen OSD ---..... | 4 |
| | Main function..... | 4 |
| | PICTURE - CONTRAST | 4 |
| | PICTURE – COLOR TONE | 5 |
| | PICTURE – PICTURE MODE..... | 5 |
| | AUDIO – MUTE | 5 |
| | AUDIO – VOLUME | 6 |
| | OSD – LANGUAGE | 6 |
| | OSD – LANGUAGE | 6 |
| | OSD –INFORMATION | 7 |
| | OSD –INFORMATION | 7 |
| | --- Media Player OSD --- | 8 |
| | Main Screen | 8 |
| | Photo operate screen..... | 9 |
| | Music operate screen..... | 9 |
| | Video operate screen..... | 10 |
| | File operate screen..... | 10 |
| | Device operate screen..... | 10 |
| | Setup screen..... | 11 |

1. INTRODUCTION

Product Description

Thank you for choosing the 15.6" AD Display and your continued support to our products.

The media player in the AD Display allows you to play back high quality HD image for JPEG files as well as video files by scaler for video up conversion to achieve 1080i.

Product Features

- HD component output for 720p/1080i JPEG display.
- Scaler for video up-conversion to 720p/1080i.
- MPEG-4 simple profile video support.
- Support file format: Wave, AAC, MP3, WMA, BMP, TIFF, PNG, GIF, JPEG, Progressive JPEG, Motion JPEG, MPEG-1, MPEG-2, MPEG-4.
- Built-in remote receiver, easy operation.
- Firmware can be upgraded by using flash memory card.
- Power-on play: automatically play.

Package Contents

Please check the package to make sure it contains the following items



Main unit



Remote controller



Adaptor



YPbPr Cable



User Manual

Assembly and Connection





2. SYSTEM SETUP

 
Remote Control function

| No | Key name | Description | Monitor Remote Control Unit |
|----|-------------------------------|---|-----------------------------|
| 1 | | Turn off volume | |
| 2 | LEFT / MENU / RIGHT / EXIT | Screen OSD navigation / entry / exit key | |
| 3 | Output | Change video out mode | |
| 4 | ◀/▶/▶/▼/ ↵ | For navigation key / Confirm function | |
| 5 | ◀◀ | Previous file | |
| 6 | | Power standby on or off | |
| 7 | Setup | No function | |
| 8 | VOL + / - | Adjust volume up / down | |
| 9 | Motion | No function | |
| 10 | ▶▶ | Next file | |


3. ON SCREEN DISPLAY OPERATING INSTRUCTIONS

--- Screen OSD ---


Main function

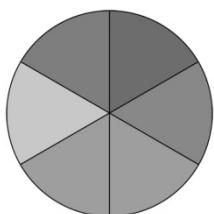

Picture

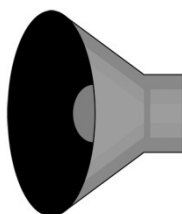 


Audio

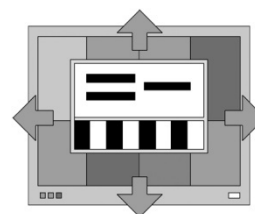 

OSD

- ✧ Use menu key into the OSD screen.
- ✧ Use left / right key for the selection movement.
- ✧ Use menu key to enter the selection.
- ✧ Use exit key to exit the selection.

PICTURE - CONTRAST

| Level 1 | Level 2 | Level 3/Function |
|--|---|--|
| <div>PICTURE</div> <div>AUDIO</div> <div>OSD</div> | <div>CONTRAST</div> <div>BRIGHTNESS</div> <div>DIMMING</div> <div>HUE</div> <div>SATURATION</div> <div>SHARPNESS</div> <div>COLOR TONE</div> <div>PICTURE MODE</div> <div>PHASE</div> |  <p>Use Left / Right key to adjust. Note: the following functions are adjusted in the same way Contrast / Brightness / Dimming / Hue / Saturation / Sharpness / Phase</p> |

PICTURE – COLOR TONE

| Level 1 | Level 2 | Level 3/Function |
|--|---|---|
| <div>PICTURE</div> <div>AUDIO</div> <div>OSD</div> | <div>CONTRAST</div> <div>BRIGHTNESS</div> <div>DIMMING</div> <div>HUE</div> <div>SATURATION</div> <div>SHARPNESS</div> <div>COLOR TONE</div> <div>PICTURE MODE</div> <div>PHASE</div> | <div>Normal / Warm / Cool</div> <div>Adjust display color temperature template.</div> |


PICTURE – PICTURE MODE

| Level 1 | Level 2 | Level 3/Function |
|--|---|---|
| <div>PICTURE</div> <div>AUDIO</div> <div>OSD</div> | <div>CONTRAST</div> <div>BRIGHTNESS</div> <div>DIMMING</div> <div>HUE</div> <div>SATURATION</div> <div>SHARPNESS</div> <div>COLOR TONE</div> <div>PICTURE MODE</div> <div>PHASE</div> | <div>Nature / Soft / Bright / User</div> <div>Adjust display color allocate template.</div> |

AUDIO – MUTE

| Level 1 | Level 2 | Level 3/Function |
|--|-----------------------------------|---|
| <div>PICTURE</div> <div>AUDIO</div> <div>OSD</div> | <div>MUTE</div> <div>VOLUME</div> | <div>OFF / ON</div> <div>Setup volume mute.</div> |


AUDIO – VOLUME

| Level 1 | Level 2 | Level 3/Function |
|---------|---------|--|
| PICTURE | MUTE |  Adjust volume. |
| AUDIO | VOLUME | |
| OSD | | |

OSD – LANGUAGE

| Level 1 | Level 2 | Level 3/Function |
|---------|-------------|--|
| PICTURE | LANGUAGE | English / 中文 / ... Change OSD display language. |
| AUDIO | H-POSITION | |
| OSD | V-POSITION | |
| | DURATION | |
| | HALFTONE | |
| | INFORMATION | |
| | RECALL | |

OSD – LANGUAGE

| Level 1 | Level 2 | Level 3/Function |
|---------|-------------|--|
| PICTURE | LANGUAGE |  Use Left / Right key to adjust. Note: the following functions are adjusted in the same way H-Position / V-Position / Duration / Halftone. |
| AUDIO | H-POSITION | |
| OSD | V-POSITION | |
| | DURATION | |
| | HALFTONE | |
| | INFORMATION | |
| | RECALL | |

OSD –INFORMATION

| Level 1 | Level 2 | Level 3/Function |
|---|---|---|
| <div> <div>PICTURE</div> <div>AUDIO</div> <div>OSD</div> </div> | <div> <div>LANGUAGE</div> <div>H-POSITION</div> <div>V-POSITION</div> <div>DURATION</div> <div>HALFTONE</div> <div>INFORMATION</div> <div>RECALL</div> </div> | <div>Display signal input information</div> |

OSD –INFORMATION

| Level 1 | Level 2 | Level 3/Function |
|---|---|--|
| <div> <div>PICTURE</div> <div>AUDIO</div> <div>OSD</div> </div> | <div> <div>LANGUAGE</div> <div>H-POSITION</div> <div>V-POSITION</div> <div>DURATION</div> <div>HALFTONE</div> <div>INFORMATION</div> <div>RECALL</div> </div> | <div>Reset setup value to default.</div> |


--- Media Player OSD ---

Main Screen




- ✧ Plug-in CF card and turns on power, 6 function icons will be displayed for selection.
- ✧ Click arrow key ◀/▲/▶/▼ of remote control to select auto power-on play.
Note: Pressing the arrow key ◀/▲/▶/▼ during looping will interrupt the play mode. To retrieve the mode please turn off the power and reboot again.
- ✧ Use arrow key ◀/▲/▶/▼ for the selection movement. Use enter key ↵ to enter / confirm the selection.
Note: When on CF card detected, you can only execute "Setup". (All other functions will be disabled.)

 Photo operate screen

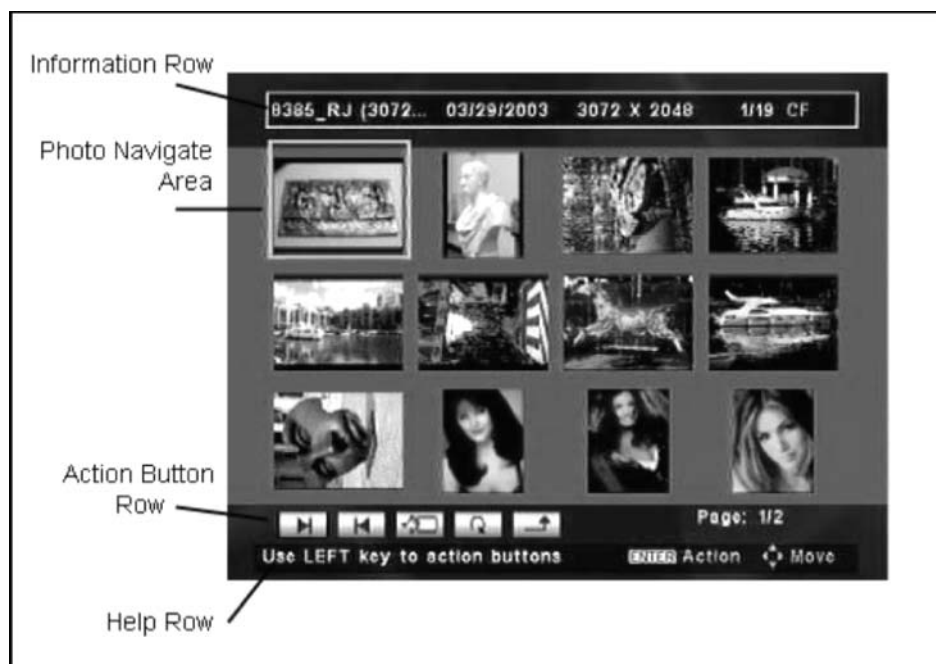

- ✧ Information Row and Help Row display subject to the setting of OSD.
- ✧ Please use arrow key ◀/▶/▲/▼ as movement, Use enter key ↵ as confirmation.
- ✧ When cursor is at first menu photo, press arrow key ◀ will link to action button row °
- ✧ This screen will not be displayed if there is no photo file format in you CF card.

 Music operate screen

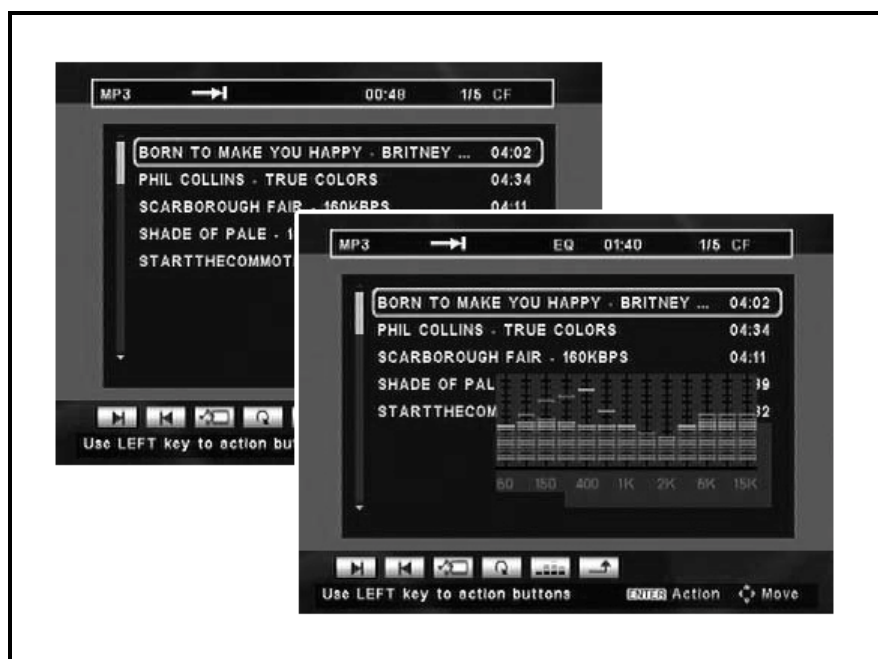

Video operate screen



File operate screen



Device operate screen

Non-active screen of user.

Setup screen

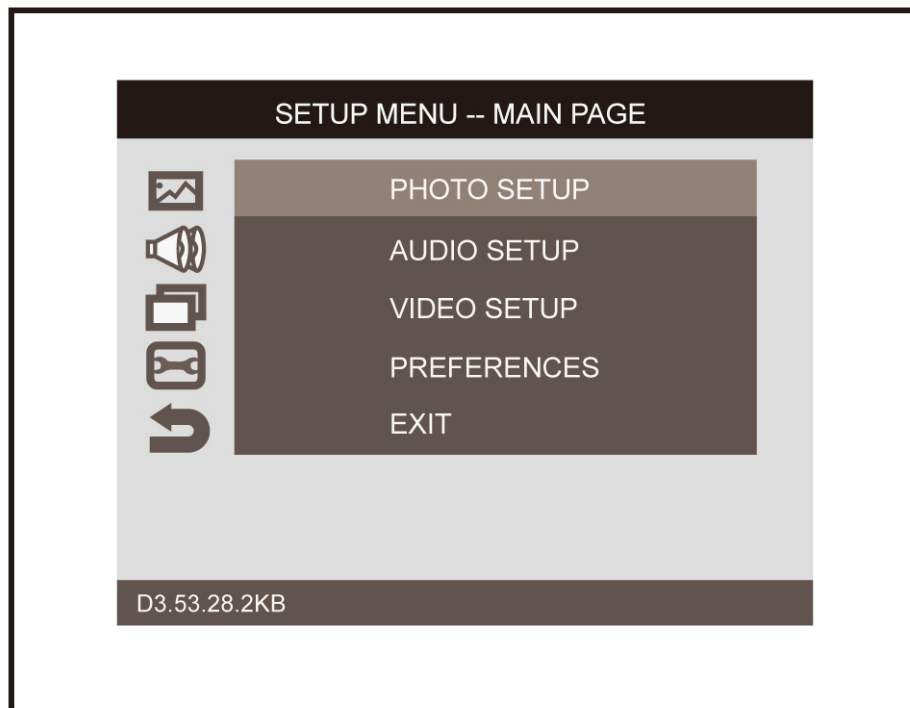 


PHOTO SETUP – THUMBNAIL DIGEST

| Level 1 | Level 2 | Level 3/Function |
|---|---|--|
| PHOTO SETUP AUDIO SETUP VIDEO SETUP PREFERENCES EXIT | THUMBNAIL DIGEST PHOTO DISPLAY SIZE SLIDESHOW MODE INTERVAL TIME TRANSITION MAIN PAGE | ON / ZOOM / OFF Icon set up ◆ ON : Reduce the icon into smaller size ◆ ZOOM : Reduce in 4:3 proportions. ◆ OFF : Remain the icon size as it is. |

Note: about the remote control key operate, is suitable for the following explanation.

1. Use ▲/▼/▶/◀ for movement among selection.
2. Use ↵ as enter / confirmation.

PHOTO SETUP – PHOTO DISPLAY SIZE

| Level 1 | Level 2 | Level 3/Function |
|-------------|--------------------|--|
| PHOTO SETUP | THUMBNAİL DIGEST | |
| AUDIO SETUP | PHOTO DISPLAY SIZE | BEST FIT / DEFAULT |
| VIDEO SETUP | SLIDESHOW MODE | |
| PREFERENCES | INTERVAL TIME | Photo setup |
| EXIT | TRANSITION | ◆ BEST FIT: Regardless photo size and adjust to best fit of screen. |
| | MAIN PAGE | ◆ DEFAULT: Display as original photo size. |

PHOTO SETUP – SLIDESHOW MODE

| Level 1 | Level 2 | Level 3/Function |
|-------------|--------------------|----------------------------|
| PHOTO SETUP | THUMBNAİL DIGEST | |
| AUDIO SETUP | PHOTO DISPLAY SIZE | MANUAL / AUTO |
| VIDEO SETUP | SLIDESHOW MODE | |
| PREFERENCES | INTERVAL TIME | How to activate slideshow |
| EXIT | TRANSITION | ◆ MANUAL: Manually. |
| | MAIN PAGE | ◆ AUTO: Auto on. |

PHOTO SETUP – INTERVAL ITME

| Level 1 | Level 2 | Level 3/Function |
|-------------|--------------------|---|
| PHOTO SETUP | THUMBNAİL DIGEST | |
| AUDIO SETUP | PHOTO DISPLAY SIZE | 1 / 3 / 5 / 10 SECONDS |
| VIDEO SETUP | SLIDESHOW MODE | |
| PREFERENCES | INTERVAL TIME | Default slideshow interval timing last. |
| EXIT | TRANSITION | |
| | MAIN PAGE | |

PHOTO SETUP – TRANSITION

| Level 1 | Level 2 | Level 3/Function |
|-------------|--------------------|--|
| PHOTO SETUP | THUMBNAIL DIGEST | Full Screen / Top->Bottom / Bottom->Top / / Implode / Cross fade / Random Determine the effect of change page between slides. |
| AUDIO SETUP | PHOTO DISPLAY SIZE | |
| VIDEO SETUP | SLIDESHOW MODE | |
| PREFERENCES | INTERVAL TIME | |
| EXIT | TRANSITION | |
| | MAIN PAGE | |

AUDIO SETUP – SPDIF OUTPUT

| Level 1 | Level 2 | Level 3/Function |
|-------------|--------------|-----------------------------|
| PHOTO SETUP | SPDIF OUTPUT | OFF / SPDIF/RAW / SPDIF/PCM |
| AUDIO SETUP | MAIN PAGE | |
| VIDEO SETUP | | Non-active screen of user. |
| PREFERENCES | | |
| EXIT | | |

VIDEO SETUP – VIDEO OUTPUT

| Level 1 | Level 2 | Level 3/Function |
|-------------|-------------------|---------------------|
| PHOTO SETUP | VIDEO OUTPUT | YPbPr / RGB |
| AUDIO SETUP | TV MODE | |
| VIDEO SETUP | VIDEO FULL SCREEN | Video output set up |
| PREFERENCES | DIVX SUBTITLE | |
| EXIT | SUBTITLE LANGUAGE | |
| | MAIN PAGE | |

VIDEO SETUP – TV MODE

| Level 1 | Level 2 | Level 3/Function |
|--------------------|-------------------|----------------------|
| PHOTO SETUP | VIDEO OUTPUT | |
| AUDIO SETUP | TV MODE | WIDE TV / NORMAL TV |
| VIDEO SETUP | VIDEO FULL SCREEN | |
| PREFERENCES | DIVX SUBTITLE | Setting for TV mode. |
| EXIT | SUBTITLE LANGUAGE | |
| | MAIN PAGE | |

VIDEO SETUP – VIDEO FULL SCREEN

| Level 1 | Level 2 | Level 3/Function |
|--------------------|--------------------------|----------------------------|
| PHOTO SETUP | VIDEO OUTPUT | |
| AUDIO SETUP | TV MODE | WIDE (16:9) / NORMAL (4:3) |
| VIDEO SETUP | VIDEO FULL SCREEN | |
| PREFERENCES | DIVX SUBTITLE | Setting for aspect ratio. |
| EXIT | SUBTITLE LANGUAGE | |
| | MAIN PAGE | |

VIDEO SETUP – DIVX SUBTITLE

| Level 1 | Level 2 | Level 3/Function |
|--------------------|----------------------|---|
| PHOTO SETUP | VIDEO OUTPUT | |
| AUDIO SETUP | TV MODE | ON / OFF |
| VIDEO SETUP | VIDEO FULL SCREEN | |
| PREFERENCES | DIVX SUBTITLE | On/Off the subtitle of DIVX video format. |
| EXIT | SUBTITLE LANGUAGE | |
| | MAIN PAGE | |

VIDEO SETUP – SUBTITLE LANGUAGE

| Level 1 | Level 2 | Level 3/Function |
|--------------------|--------------------------|--|
| PHOTO SETUP | VIDEO OUTPUT | |
| AUDIO SETUP | TV MODE | ENGLISH / 中文 |
| VIDEO SETUP | VIDEO FULL SCREEN | |
| PREFERENCES | DIVX SUBTITLE | Select language subtitle of DIVX video format. |
| EXIT | SUBTITLE LANGUAGE | |
| | MAIN PAGE | |

PREFERENCES PAGE – OSD LANGUAGE

| Level 1 | Level 2 | Level 3/Function |
|--------------------|---------------------|----------------------|
| PHOTO SETUP | OSD LANGUAGE | |
| AUDIO SETUP | INFORMATION ROW | ENGLISH |
| VIDEO SETUP | HELP ROW | |
| PREFERENCES | FILE EDITING | Setting OSD Language |
| EXIT | FILE SORTING | |
| | AUTO START | |
| | SETUP VALUES | |
| | MAIN PAGE | |

PREFERENCES PAGE - INFORMATION ROW

| Level 1 | Level 2 | Level 3/Function |
|--------------------|------------------------|--|
| PHOTO SETUP | OSD LANGUAGE | |
| AUDIO SETUP | INFORMATION ROW | ON / OFF |
| VIDEO SETUP | HELP ROW | |
| PREFERENCES | FILE EDITING | Display information or not in manual operate mode. |
| EXIT | FILE SORTING | |
| | AUTO START | |
| | SETUP VALUES | |
| | MAIN PAGE | |

PREFERENCES PAGE – HELP ROW

| Level 1 | Level 2 | Level 3/Function |
|--------------------|-----------------|---|
| PHOTO SETUP | OSD LANGUAGE | ON / OFF |
| AUDIO SETUP | INFORMATION ROW | |
| VIDEO SETUP | HELP ROW | Display help or not in manual operate mode. |
| PREFERENCES | FILE EDITING | |
| EXIT | FILE SORTING | |
| | AUTO START | |
| | SETUP VALUES | |
| | MAIN PAGE | |

PREFERENCES PAGE – FILE EDITING

| Level 1 | Level 2 | Level 3/Function |
|--------------------|---------------------|-----------------------------|
| PHOTO SETUP | OSD LANGUAGE | ON / OFF |
| AUDIO SETUP | INFORMATION ROW | |
| VIDEO SETUP | HELP ROW | Non-active screen for user. |
| PREFERENCES | FILE EDITING | |
| EXIT | FILE SORTING | |
| | AUTO START | |
| | SETUP VALUES | |
| | MAIN PAGE | |

PREFERENCES PAGE – FILE SORTING

| Level 1 | Level 2 | Level 3/Function |
|--------------------|---------------------|---|
| PHOTO SETUP | OSD LANGUAGE | A TO Z / Z TO A / RECENT DATA / OLDEST DATE |
| AUDIO SETUP | INFORMATION ROW | |
| VIDEO SETUP | HELP ROW | Setting the play sequence preference. |
| PREFERENCES | FILE EDITING | |
| EXIT | FILE SORTING | |
| | AUTO START | |
| | SETUP VALUES | |
| | MAIN PAGE | |

PREFERENCES PAGE – AUTO START

| Level 1 | Level 2 | Level 3/Function |
|--------------------|-------------------|---|
| PHOTO SETUP | OSD LANGUAGE | OFF / PHOTO + MUSIC / PHOTO + VIDEO |
| AUDIO SETUP | INFORMATION ROW | |
| VIDEO SETUP | HELP ROW | |
| PREFERENCES | FILE EDITING | Auto start setting / power-on ◆ OFF : manual. ◆ PHOTO + MUSIC : Auto start Photo + Music. ◆ PHOTO + VIDEO : Auto start Photo + Video. |
| EXIT | FILE SORTING | |
| | AUTO START | |
| | SETUP VALUES | |
| | MAIN PAGE | |

PREFERENCES PAGE – SETUP VALUES

| Level 1 | Level 2 | Level 3/Function |
|--------------------|---------------------|-----------------------------------|
| PHOTO SETUP | OSD LANGUAGE | DEFAULT |
| AUDIO SETUP | INFORMATION ROW | |
| VIDEO SETUP | HELP ROW | |
| PREFERENCES | FILE EDITING | Return to factory default set-up. |
| EXIT | FILE SORTING | |
| | AUTO START | |
| | SETUP VALUES | |
| | MAIN PAGE | |